



## IMPORTANT SAFETY PRECAUTIONS

Basic safety precautions should be followed when using electrical appliances, especially when there are children.

In order to avoid electric shock follow the following rules:

- Before cleaning the electrical appliance, unplug it from the mains.
- Do not use the electrical appliance in a bath or shower. Do not drop it into water or other liquids.

Do not touch an electrical appliance that has fallen into the water! Unplug it immediately.

### **In order to prevent a burn, fire, or injury:**

- Use this appliance only for the purposes described in this operations manual. Do not use devices that are not recommended by the manufacturer.
- Never leave this electrical appliance plugged in unattended.
- When an electrical appliance is used by children or persons with disabilities, it must be carefully supervised.
- Never operate the electrical appliance if the cord or plug is damaged.
- Keep the cord away from hot surfaces. Do not pull or bend the cord. Do not wrap it around the electrical appliance.
- Do not drop the electrical appliance. Do not insert foreign objects into its holes.

Warranty obligations:

1. The manufacturer guarantees the operation of the product under the conditions of transportation, storage, and operation.
2. The warranty covers all damage to the product probably caused by a manufacturing defect.
3. The warranty does not cover mechanical damage to the product.
4. The warranty period of the product is 12 months from the date of sale.

The warranty does not cover the following products:

- Products, if malfunctions in them have arisen as a result of the violation of the rules of operation and transportation.
- Damage caused by overuse, improper handling, improper storage or maintenance, and improper blade removal.
- Components worn out during operation and having a limited service life (power cords, brushes, plastic leashes, etc.)
- Damage caused by getting foreign objects, substances, and insects in.
- Self-repair of the product or repair carried out in non-specialized workshops.

The consumer loses the warranty service rights in the following cases:

- at the expiration of the warranty period;
- in the presence of mechanical damage to the outer parts of the product;
- in case of violation of the rules of operation.

Cleaning and lubrication of products and sharpening of blades after any period of operation are not included in the cost of warranty service.

You must show the documents certifying the purchase of this product, this product manual with the signature of the seller, and the stamp of the trading organization to get the warranty repair.

« \_\_\_\_\_ » \_\_\_\_\_ 20\_\_ year

« \_\_\_\_\_ » \_\_\_\_\_ 20\_\_ year

\_\_\_\_\_  
Seller Signature

\_\_\_\_\_  
Seller Signature

Place for stamp

Place for stamp


# MUSTANG

## Hair Dryer ATOMIC MBF-03

**Note:** before using the hair dryer, please read this operations manual.

**Warning:** do not use the hair dryer in a bathroom, shower, or near wet areas.

### SCHEME AND DESCRIPTION OF THE HAIR DRYER

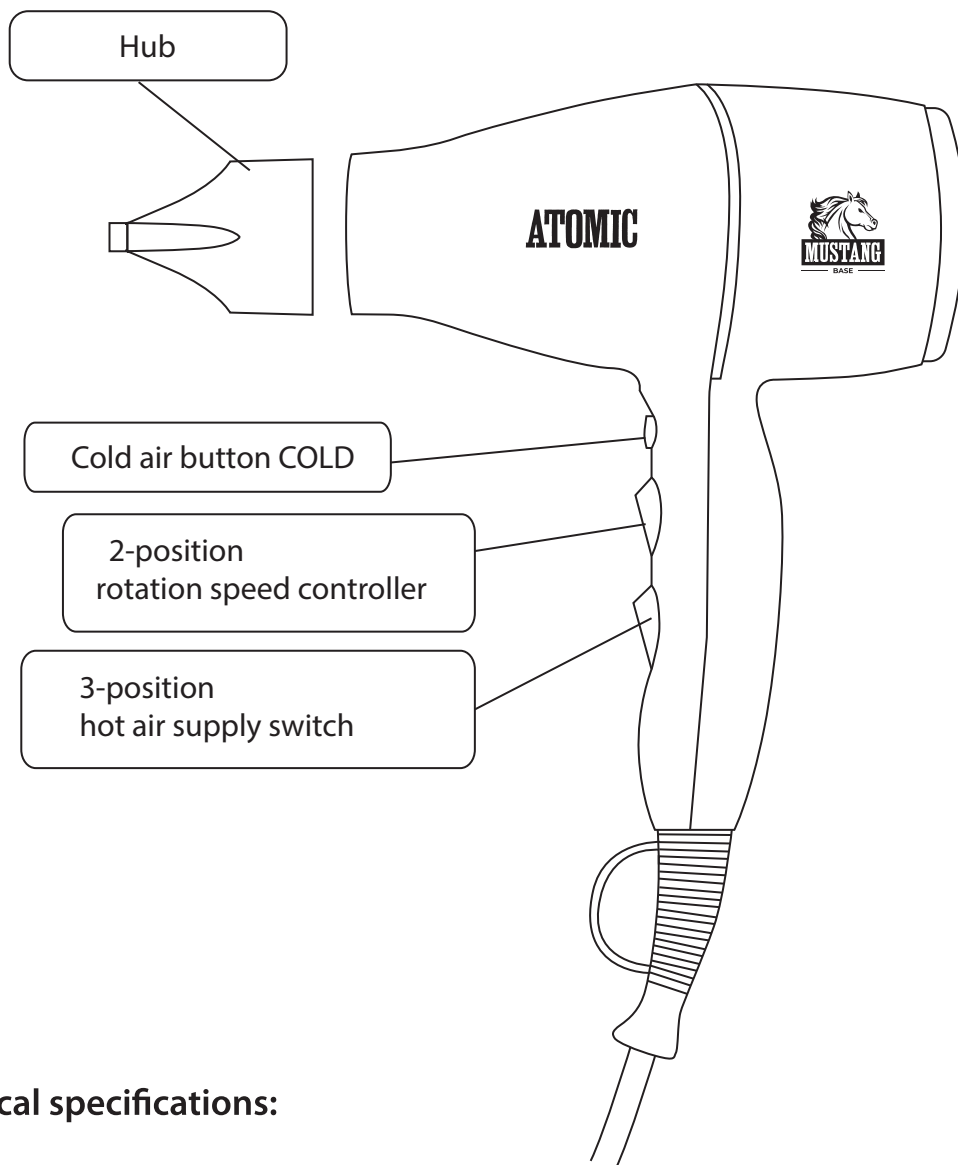

### Technical specifications:

- Power 2100 W
- 2 speed modes
- 3 temperature modes
- 2.8 meter cord
- Weight 460 grams

### The kit includes:

Hair dryer MBF-03  
4 nozzles

# MUSTANG

## OPERATIONS MANUAL

The hair dryer is equipped with a negative ion generator. The generator turns on while the hair dryer is on. Negative ions break down the water molecules on the hair into smaller particles, significantly reducing drying time.

Ions coat the hair, protecting it from over-drying and removing static electricity. As a result, hair preserves its natural water balance, becoming more elastic, manageable, and shiny.

### IMPORTANT INFORMATION

- Do not wrap the cord around the hair dryer.
- The hair dryer can be operated from the energy grid at a voltage of 220/240 volts.
- Do not place a hair dryer on heating appliances.
- Never immerse the hair dryer in water. Never use it while taking a bath or shower.
- Do not leave the hair dryer in operation on a wet surface.
- Do not block the air inlets and outlets while the hair dryer is in operation.
- If the hair dryer is not in use, it must be unplugged.
- Do not pull on the wire.
- Do not turn on the hair dryer without the rear filter attached.
- Do not use the hair dryer if it has a damaged wire, or if it has other signs of damage.
- Unplug the device:

If it does not work properly; before cleaning; after use.

### Recommendations for use:

Use a hair dryer only to dry and style your hair.

To avoid damaging your hair, do not hold the hair dryer too close to your head.

Removable nozzles, both wide and narrow ones, will help you direct the airflow when drying your hair. They are easy to put on the front of the case.

### Cleaning and care:

Remember that the air-inlet grille should be cleaned regularly with a brush, removing dust and hair from the grille. Unplug the device from the power grid before cleaning.

# MUSTANG

Fault	Fault diagnosis	Maintenance
A) No power supply	1) Check the electrical plug for integrity 2) Check for electricity availability	If you detect any (A B C D) faults, contact to the service center or to a specialist to replace the defective part.
B) Hair dryer does not heat the air	1) Check the mode switch 2) Check the heating element for integrity	
C) The mode switch does not work	Check the fuse	
D) The heating element is heated up	Clean up the propeller	